


0% MAN WORKER JACKET // GOOD TO KNOW

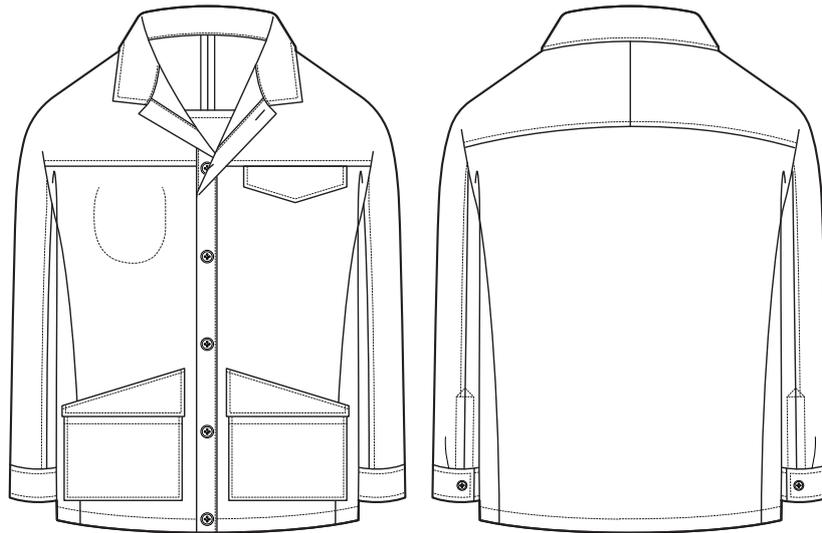

Hi workwear lover !

You got a Zero Waste pattern of man worker jacket, congrats !

This is a complete garment fitted into a rectangle, it contributes to save our resources by using all the fabric surface. I designed this garment as a **regular fit** workwear jacket with a quite conventional shape. Then, it will look really nice with a 100% cotton fabric. But it's important to understand that this special garment design method tends to create some different volumes and finishes of a conventional pattern.

Suggested fabric types : denim, twill or moleskin fabric.

Sewing notions : 6x 18mm buttons for front fastening, 2x 15 mm buttons for cuffs, approx. 40/50 cm of cotton herringbone tape 10mm width for left chest pocket joining and sleeve's vent.


Machines you need: sewing machine, overlock stitch machine (or zigzag stitch otherwise)

Needed time: 8 to 10 hours

Difficulty: Middle / High


- Before start sewing -

Prepare cardboard template to preform the inside pocket by using the pattern piece without seam allowance

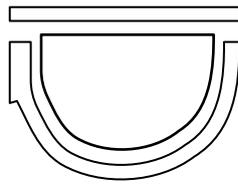


①

Cut seam allowances around inside right chest pocket

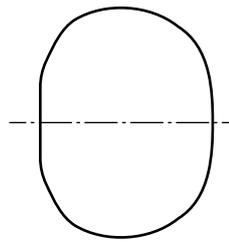

②

Reproduce symmetrically

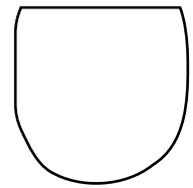

③

Cut where you want to place the hem

- What these symbols mean ? -



Wrong side of fabric



Right side of fabric



Cut




Press with iron




This work is licensed under the Creative Commons Attribution - Pas d'Utilisation Commerciale - Partage dans les Mêmes Conditions 4.0 International License. To view a copy of this license, visit

<http://creativecommons.org/licenses/by-nc-sa/4.0/>.


TO OVERLOCK BEFORE SEWING

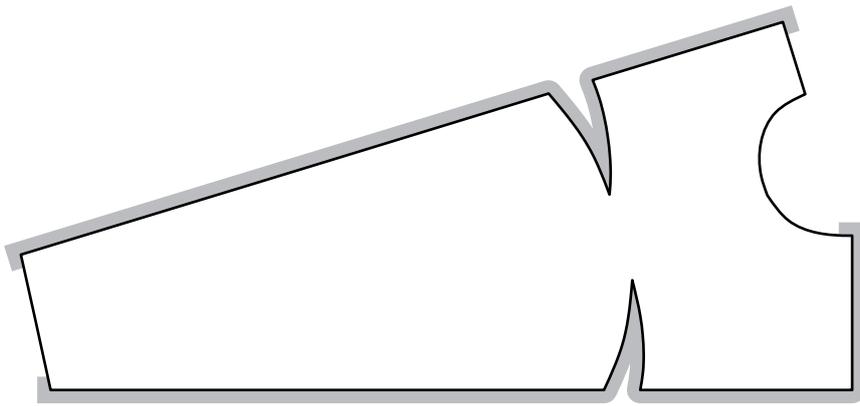


Sleeve x2

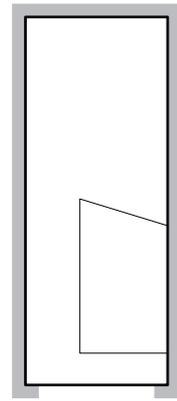


Front x2

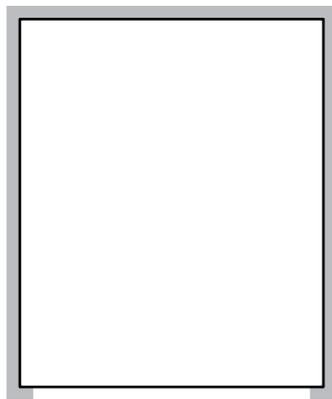


Back

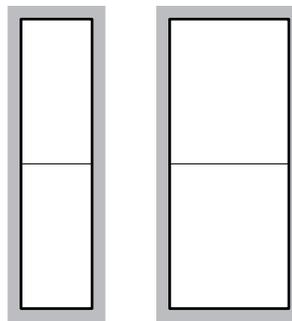


Two parts of left chest pocket

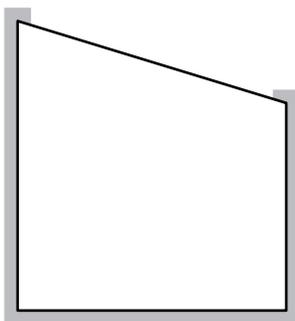

Front patched pocket x2

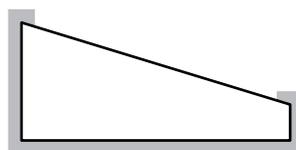


Front patched pocket's facing x2

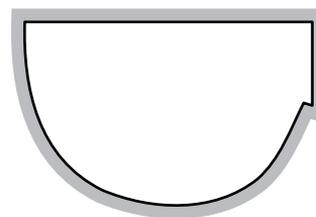

Two parts of right chest pocket



Left chest pocket's flap

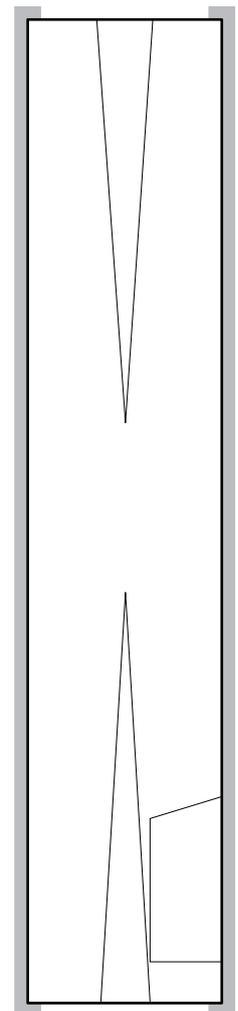


Gusset x2


MARKS & NOTCHES

The best advice I could give you is to trace all the placement marks (pockets, pocket bag, darts, etc.) either with chalk pencil, magic pen or by handstitch.
Go through all pieces to trace all marks and pink all notches. Yes, it looks like time wasting now but it will serve later, trust me.

DARTS

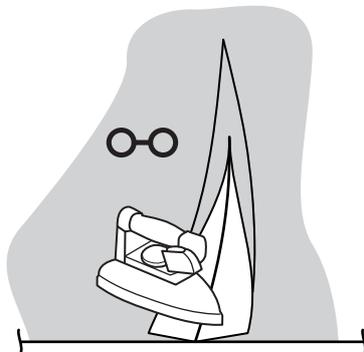


Sew the sleeve's darts according to the marks.
Press with iron to open it.

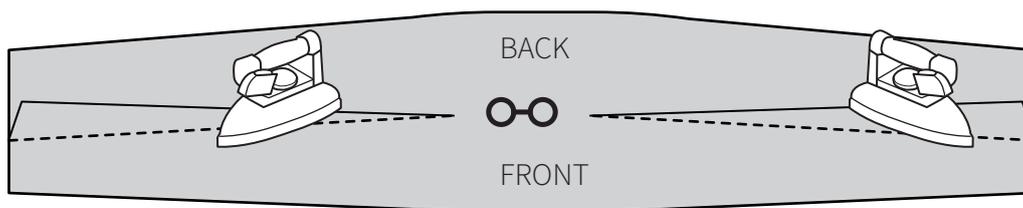


Sew the gusset's darts
Press them towards back.

SLEEVE AND GUSSET

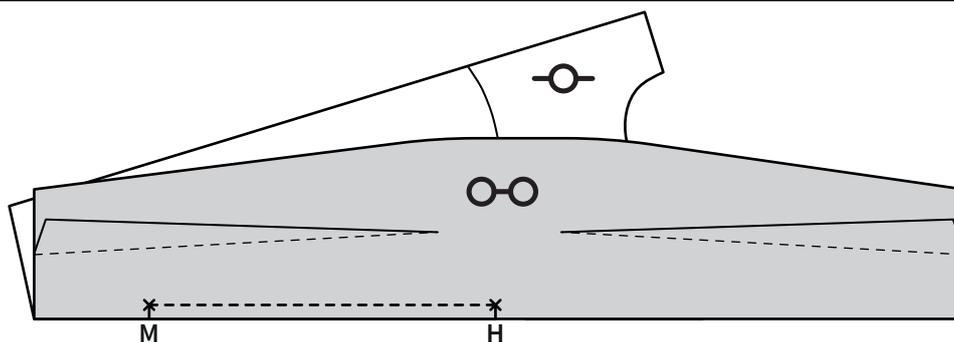

Assemble gusset and sleeve between marks M and H. This is the back sleeve's seam.


SLEEVE'S VENT

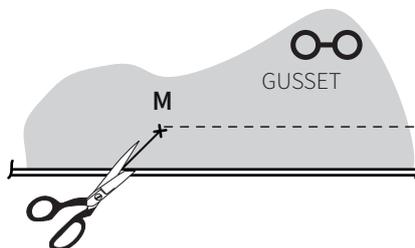


Pink only the gusset layer to 1 mm of M mark.

Press seam allowance towards sleeve


- 1/** lay the herringbone tape along the vent and sew on the right side of fabric
- 2/** patch it inside and sew around as shown
- 3/** Sew the edge of the tip

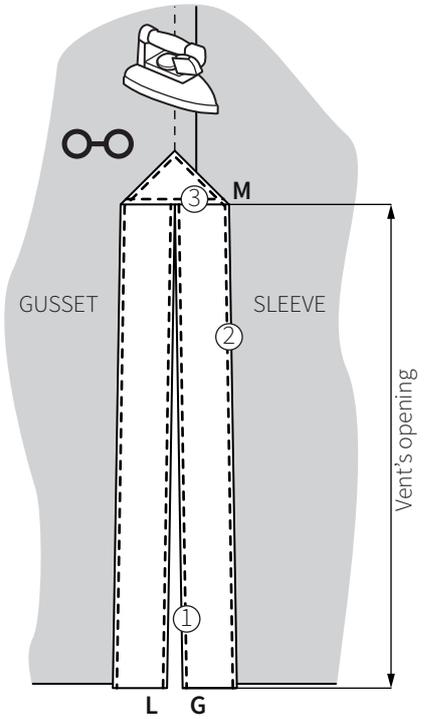

THE BACK

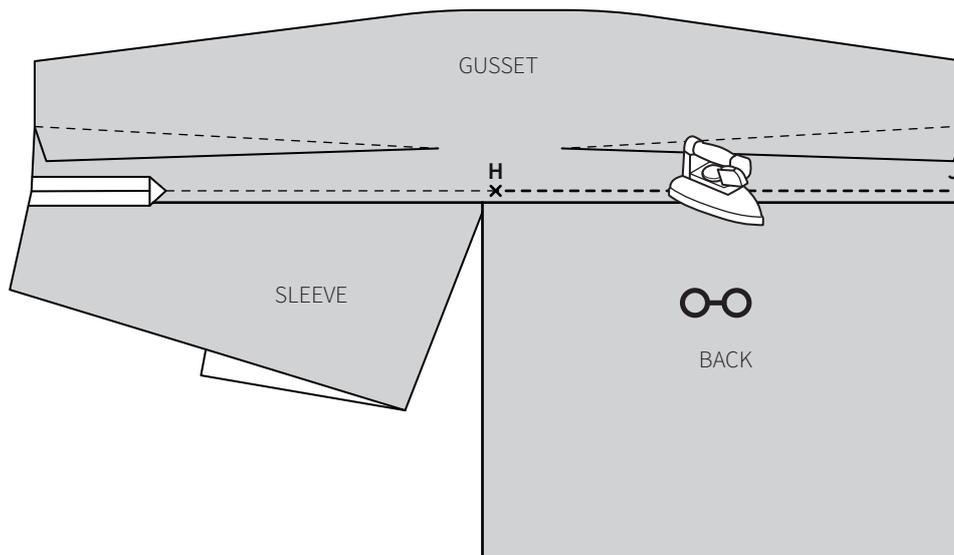


Sew the back panel to the gusset between marks H & J.
Stop sewing at 1 cm from edge and leave the top back seam allowance unsewn.

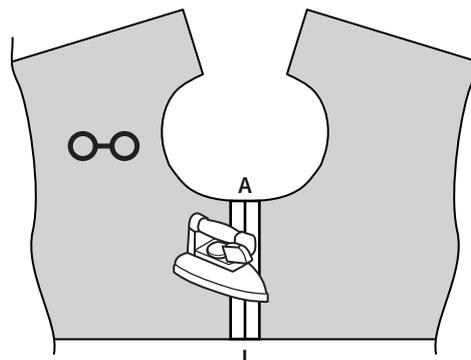

Sew the sleeves right side together on the middle back between marks A & I.




Fold and sew the back loop right side together.
Turn it out.

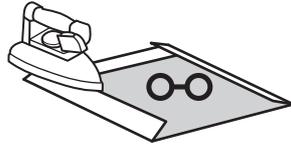


Fold three sides of inside neck patch at 1 cm.


Insert the back loop at the bottom of the patch and sew the patch on the middle back with an edge topstitching.

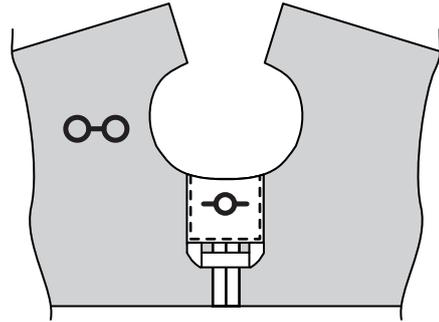


Sew the top back to the sleeves between marks H, I and H.
Start sewing at the junction and stop sewing at the other.

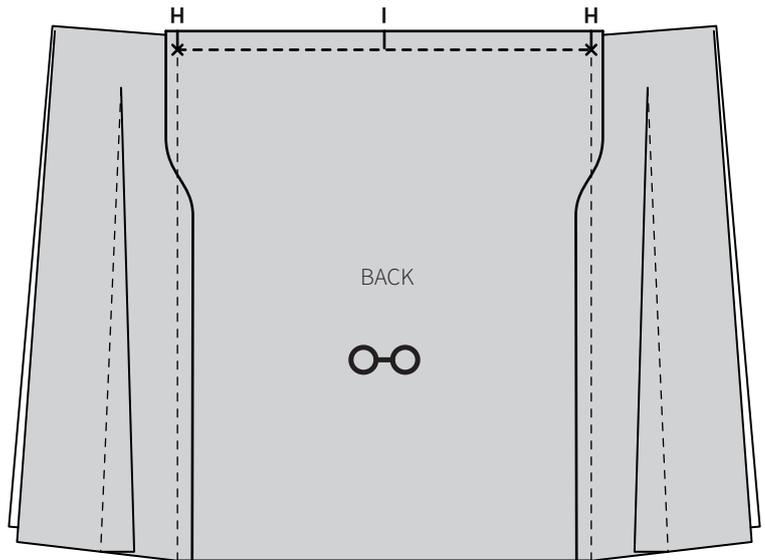


Pink the gusset's seam allowance to 1 mm of the junction.

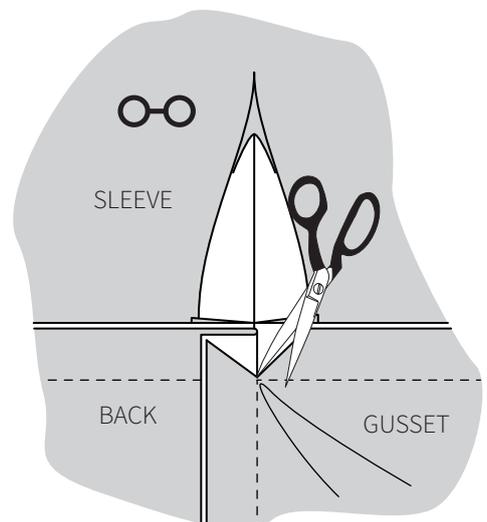

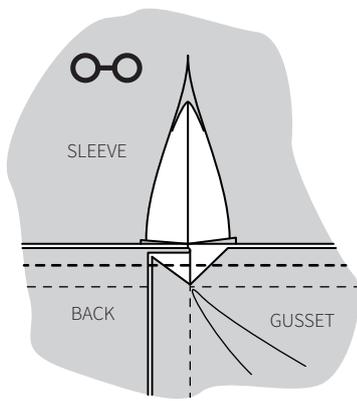


Inside junction view

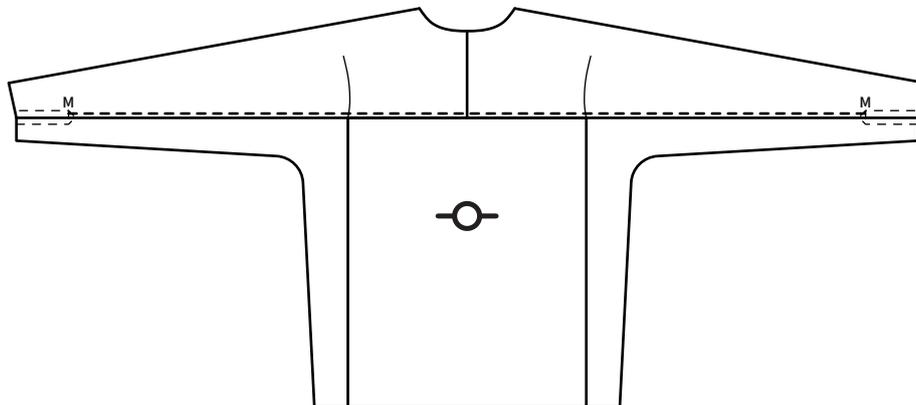


Make a topstitching at 0,7 cm between both marks M.

YOU DESERVE A BREAK NOW


RIGHT CHEST POCKET

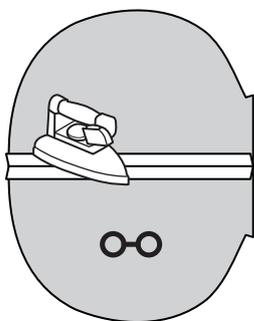


Assemble the both pieces of inside right chest pocket right side together.

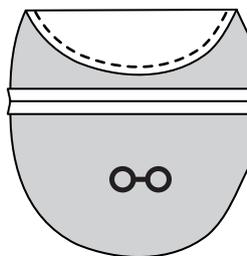

Fold the top and sew it at 0,5 cm to create the pocket's opening.

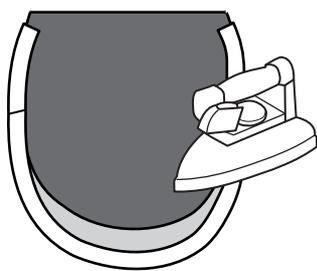


Preform the pocket's edge with the cardboard template.

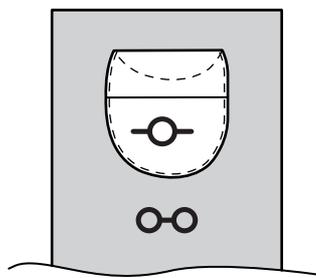



Patch it on wrong side of fabric of right front panel.

LEFT CHEST POCKET


Join the two pieces of left pocket edge to edge by patching herringbone tape on right side of fabric.

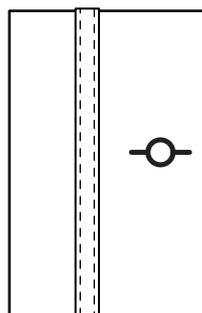


Sew the pocket bag between the two marks on left front panel wrong side on right side of front left panel.
 Make a 1,5 cm wide «window».
 Pink the corners to 1 mm of the angle.

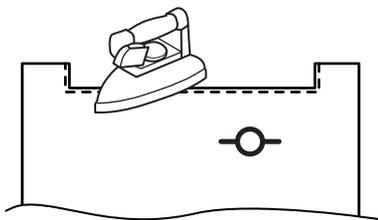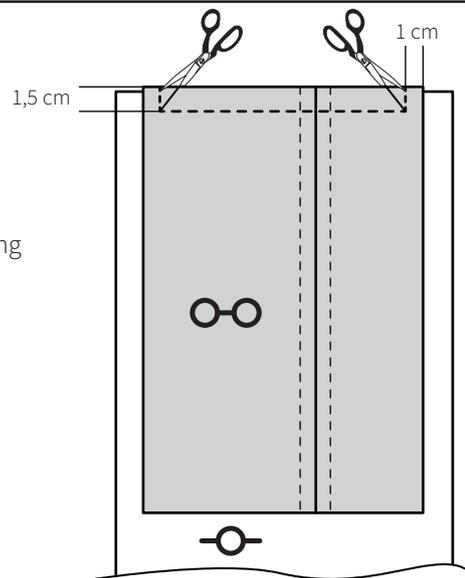


Turn it and press.
 Make an edge topstitching.

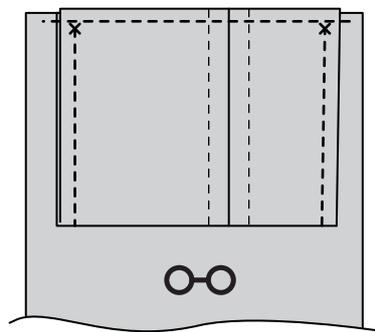


Fold the pocket bag and sew the both sides.
 Stop sewing at the corners of the opening.

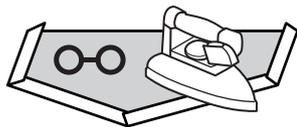


Prepare the flap by folding the edge at 1 cm and topstitch it at 0,7 cm.

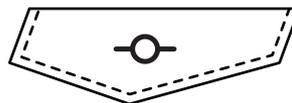


Attach the flap on the pocket's opening at 0,7 cm.
 The flap is longer than the pocket's opening to hide it properly.

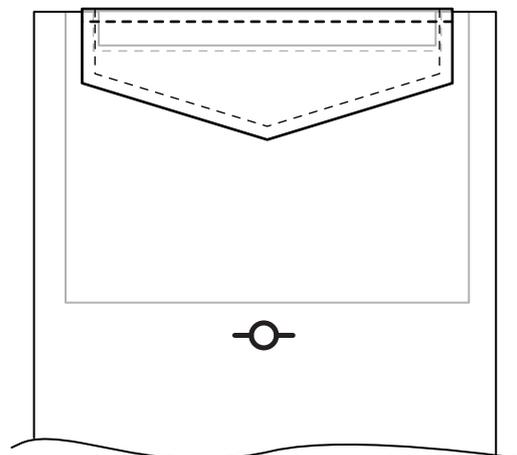

THE FRONT

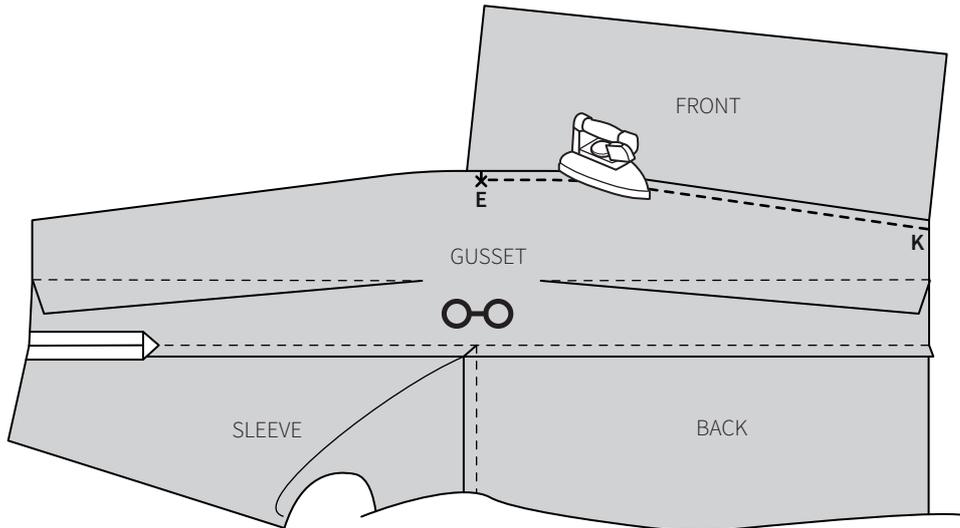


Assemble the front panel onto the gusset from mark E to K.
Press it towards the front panel.

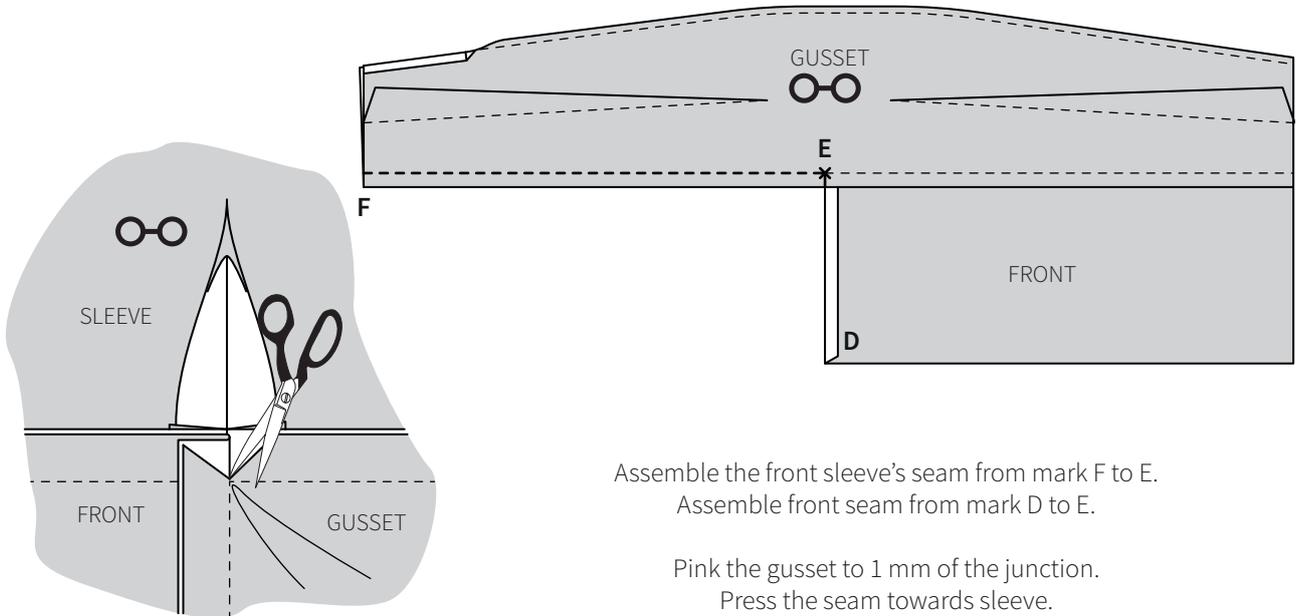


Assemble the front sleeve's seam from mark F to E.
Assemble front seam from mark D to E.

Pink the gusset to 1 mm of the junction.
Press the seam towards sleeve.

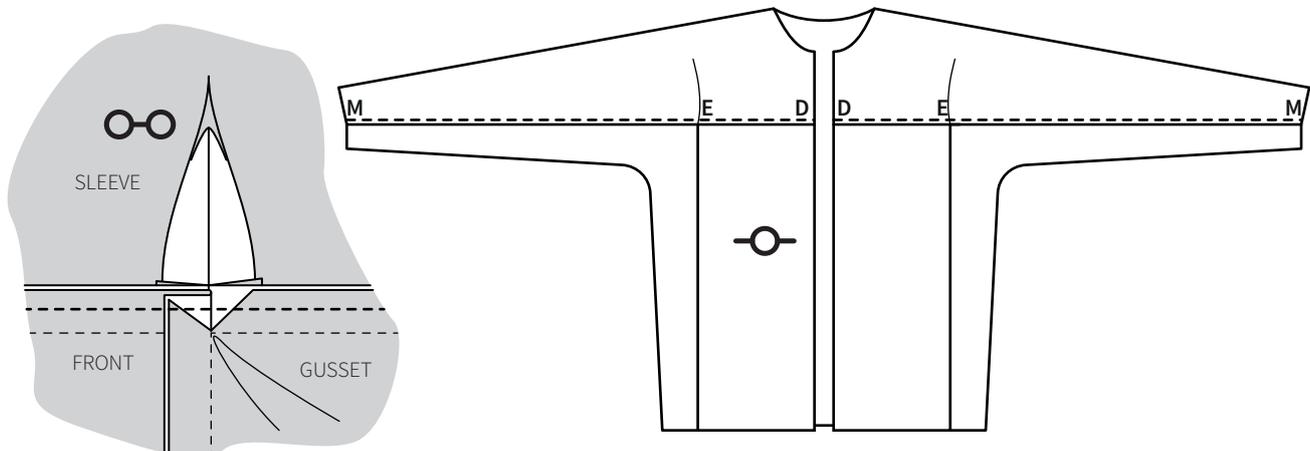


Make a topstitching at 0,7 cm from M to E to D.

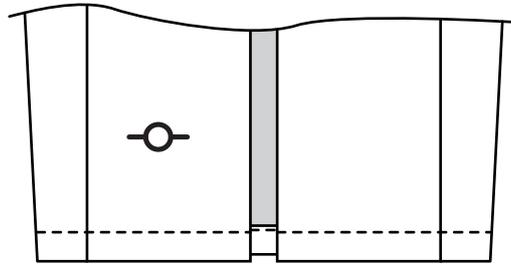


Fold the bottom hem and sew it.

HAVE A CUP OF COFFEE


FRONT PATCHED POCKETS

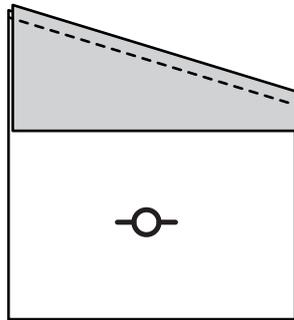


Assemble front pocket and the associated facing.

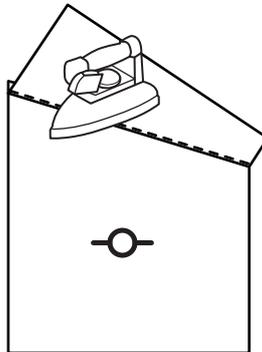

Press seam allowance towards facing and make an understitching at 1 mm.


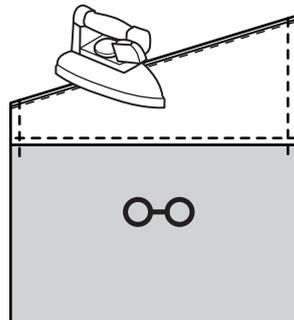


Turn & press.
Sew the facing on the pocket at 0,5 cm from the edge.
Attach the sides at 0,7 cm.

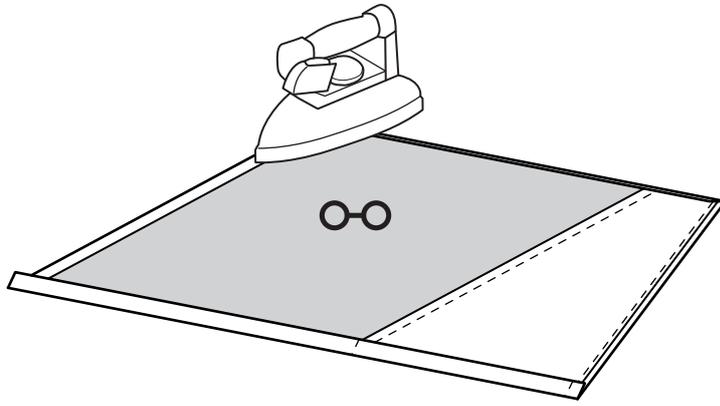


Fold the edges at 1 cm.

Pin the pocket's reinforcement pieces on the wrong side of fabric at the pocket's top corners.
Patch the pocket inside marks of pocket's placement.

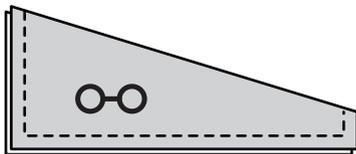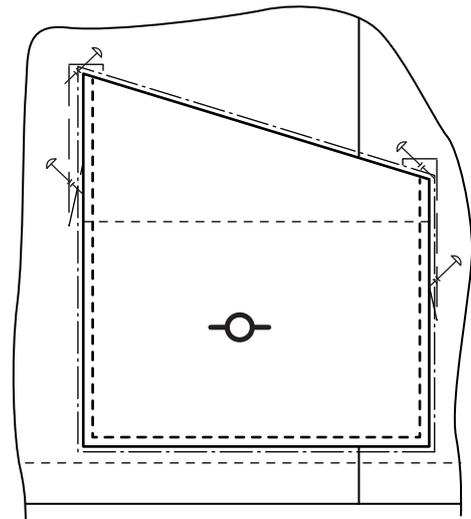



Assemble the two parts of flap right side together.

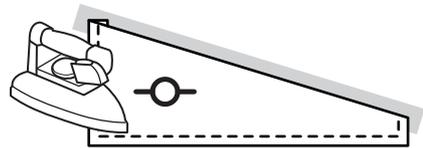

Turn it out.
Press it.
Topstitch at 0,7 cm.
Overlock all layers together.


Sew the flap in parallel at 1,5 cm from the pocket.

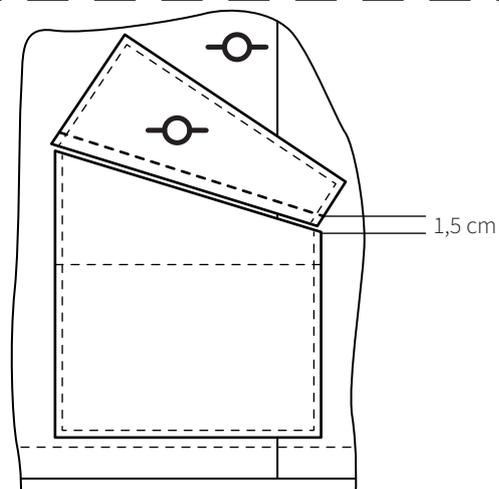


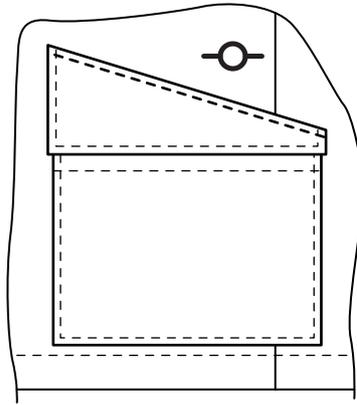


Fold the flap down and topstitch it at 0,7 cm.


FRONT BUTTONED TAB

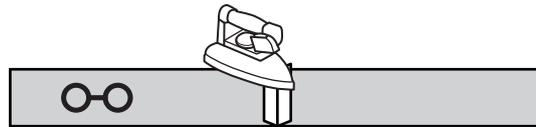

Sew the two parts of button tab right side together.
Press seam opened.

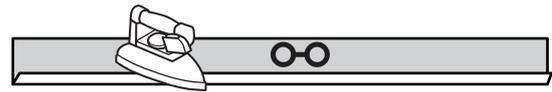
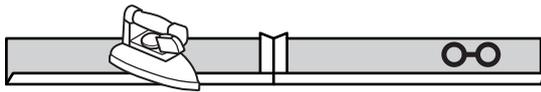


Fold one of the two sides at 1 cm on both tabs.

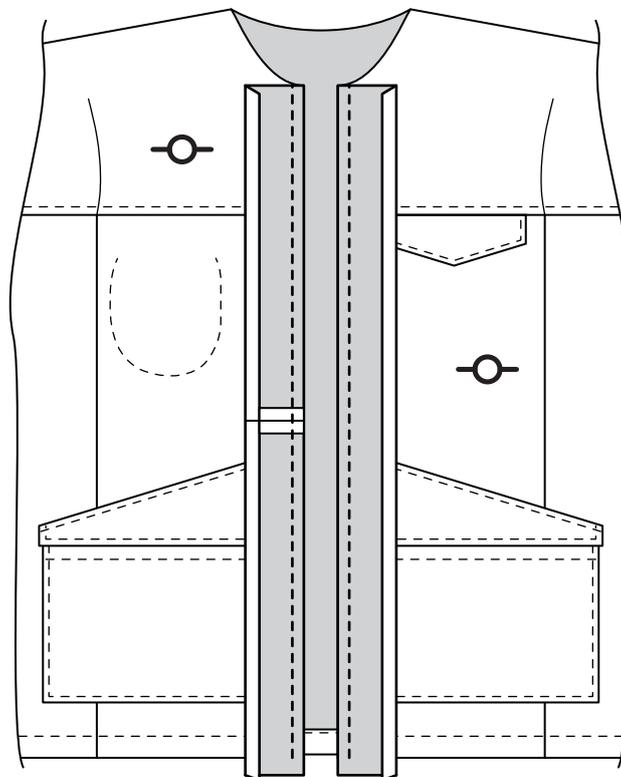

Sew the button and buttonhole tabs on the middle front right side together.

Fold the bottom tip of the tab to make a clean edge.
 Sew it by hand stitch.
 Turn the tab and press seam allowance towards tab.
 Attach it by hand stitch.
 Make an edge topstitching.

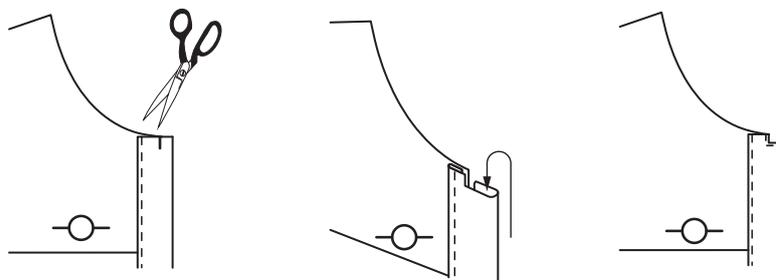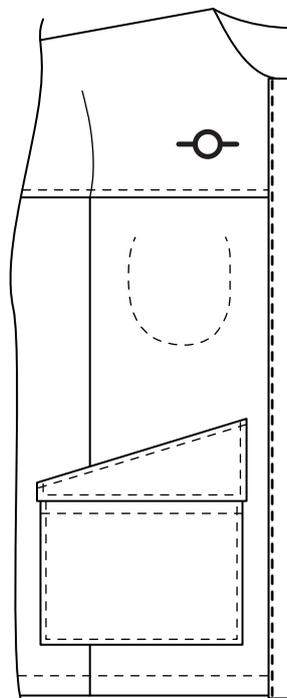

Pink on the middle of the front tabs.
 Push the fabric inside to make a clean edge.
 Topstitch it at 1 mm.

TAKE SOME REST WITH CAKE


COLLAR




Sew the two parts of under collar right side together.
 Press seam opened.



Fold the upper collar at 1 cm.

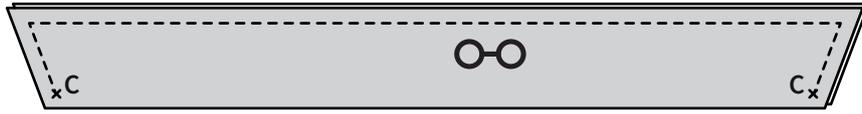


Assemble the collar right side together.
Start & stop sewing at 1 cm from edge.

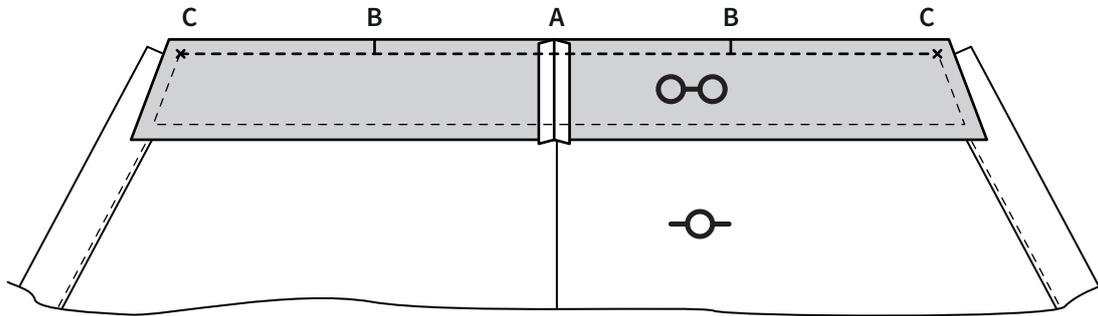


Assemble the under collar right side together with the neck.
Make the marks C, B, A, B, C on collar and neck match together.
Press seam allowance towards collar.


Sew inside collar by hand stitch all around neck.

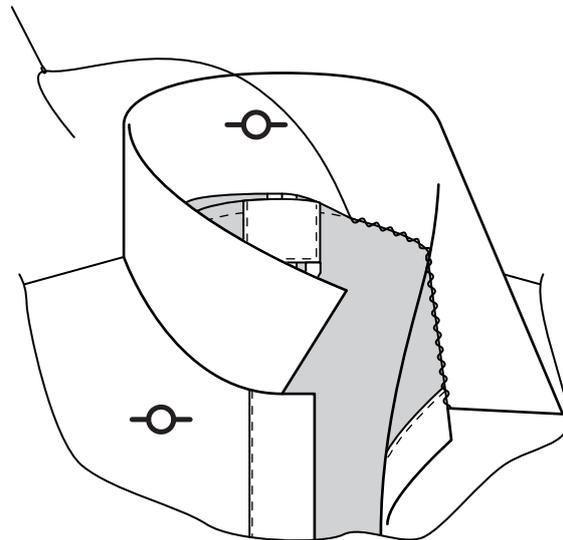

Make and edge topstitching on neck and 0,7 cm on the collar.

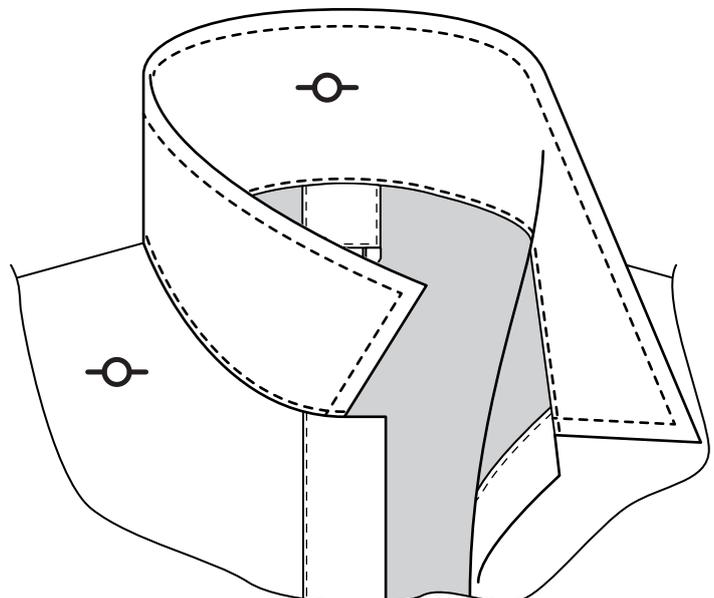


CUFF

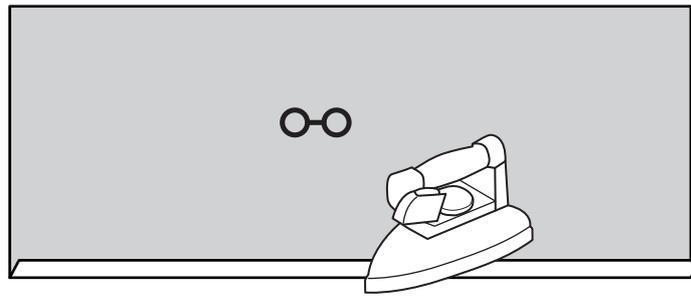


Fold inside part of cuff at 1 cm.


Sew both sides of cuff right side together.
Start & stop sewing from edge to marks L and G.

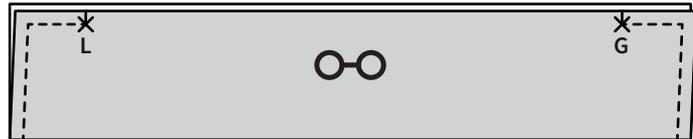

Sew the unfold side of cuff on sleeve right side together.
Make the marks L, F and G on cuff and sleeve match together.
Press seam towards inside cuff.
Turn it out.

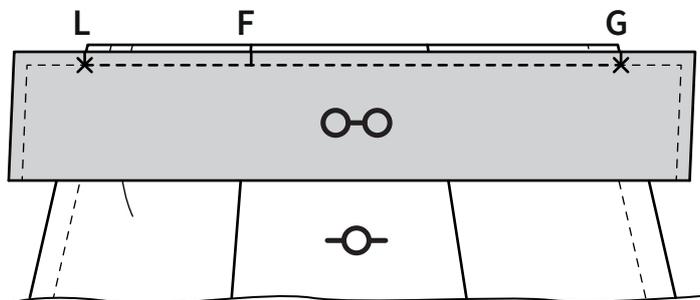

Sew inside cuff by hand stitch.
Make a topstitching at 0,7 cm all around cuff.

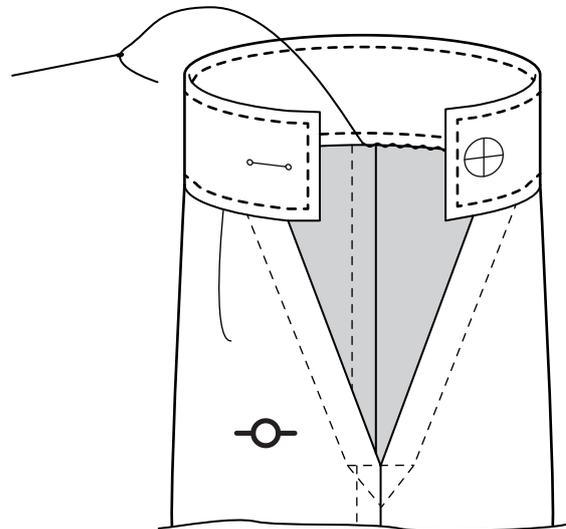

LAST OPERATIONS

Make all buttonholes according to the button's sizes.
Sew all buttons.
Make a final pressing.

You got it !

I hope you enjoyed this moment we spent together, now enjoy your creation !